


AIRMOSEN

SLOW JUICER

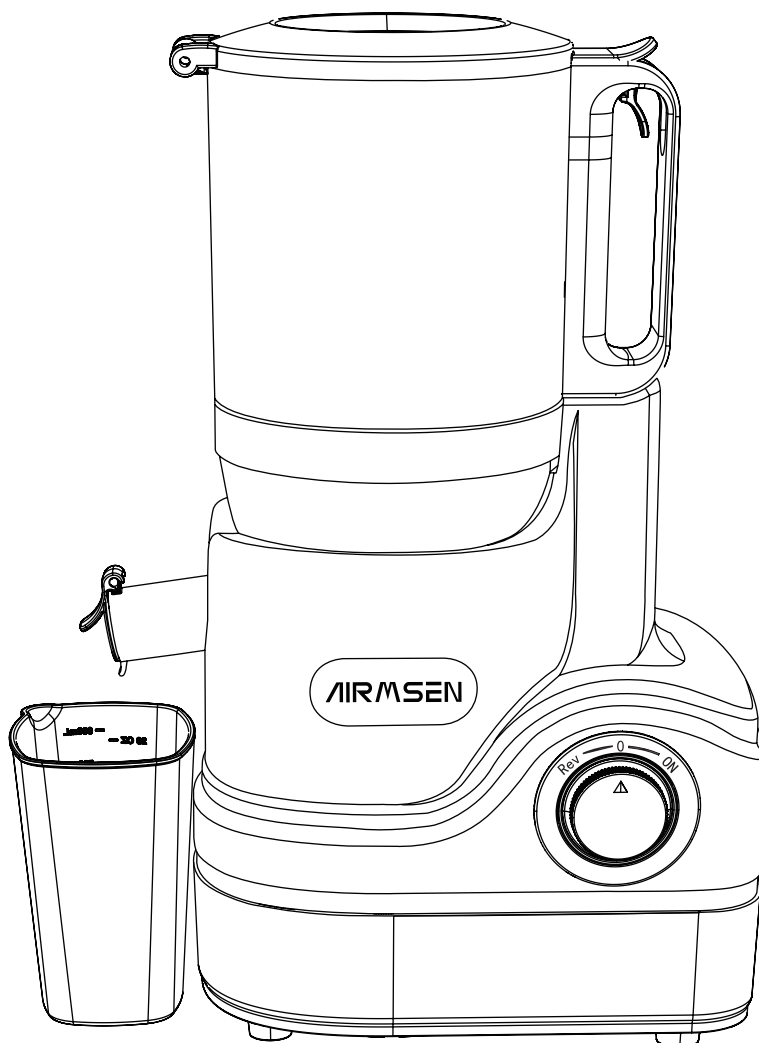

USER MANUAL

If you are having problems using this slow juicer
email: **service@airmsen.com** or call **1-844-725-2333**
for assistance: **www.airmsen.com**

To best serve you, our AIRMOSEN Representatives are available to answer your calls Monday to Friday, 10:30 AM – 6:30 PM EST.

THANK YOU FOR MAKING AIRMOSEN APPLIANCES A PART OF YOUR HOME.

CONSTANT INNOVATION FOR BETTER PRODUCTS

With “technology, innovation, health” as our core value, we strive to provide you with the preferred brand of household products in your healthy and quality life.

AIRMOSEN focuses on researching, developing and manufacturing various kinds of household supplies with advanced technologies and the idea of sustainable development. Aiming to promote the evolution of our lifestyle, we will bring our customers around the world a healthier, happier, more intelligent and ecofriendly home life with our high quality products.

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



WARNING

This is the safety alert symbol.

This symbol alerts you to potential hazards that can cause serious injury to you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

CONTENTS

IMPORTANT SAFEGUARDS	04
SAFETY WARNINGS	04
COMPONENT INTRODUCTION	05
INITIAL CLEANING BEFORE FIRST USE	06
ASSEMBLY INSTRUCTIONS	06
OPERATION INSTRUCTIONS	09
DISASSEMBLE AND CLEAN	11
TROUBLESHOOTING Q&A	13
WARRANTY	14
CUSTOMER SUPPORT	15

PRODUCT SPECIFICATIONS

Model	Voltage	Frequency
KS-218T	120V~	60Hz
Rated Power	Juice Cup Capacity	Pulp Cup Capacity
300W	23.67 oz (700ml)	20.29 oz (600ml)

IMPORTANT SAFEGUARDS

Congratulations on your purchase of the new AIRMSEN slow juicer.


This user manual contains important information regarding the installation, use, and aintenance of this machine Please spend some time reading this manual to make the best use of all functions of this multifunctional electric steamer.

SAFETY WARNINGS

To reduce the risk of fire, electric shock, and/or personal injury, please always stick to the following basic safety precautions when using this machine:

1. Before use, ensure the device's rated voltage matches the local power supply voltage.
2. **Do not use damaged power cords or plugs.** If the device malfunctions or is damaged, immediately contact the manufacturer or service agent (service@airmsen.com). **Do not disassemble or attempt to repair the device yourself.**
3. **Never immerse the power cord or plug in water or any other liquid.**
4. **Do not plug or unplug the power cord with wet hands** to avoid electric shock.
5. Avoid forcibly bending the power cord, placing it near high-temperature sources, bundling it, or placing heavy objects on it to prevent damage that may cause fire or electric shock.
6. **This product is for household use only. Commercial use is strictly prohibited.**
7. Maintain at least **11.8 inches (30 cm)** of clearance around the device for heat dissipation. Do not cover the surface with any objects.
8. **Do not place the product near heat sources such as stoves,** as this may damage the product or cause a fire.
9. Before starting, **ensure all components are correctly installed** and only use genuine original accessories from this brand.
10. **Do not allow children to operate the product unsupervised.** Ensure children do not treat it as a toy, and store it out of reach of infants. The elderly, individuals with limited mobility, and those without experience should use it under supervision and guidance.
11. **Never move the product while it is operating or touch moving parts.**
12. **Do not operate the product unattended.**
13. **Never insert fingers, spoons, chopsticks, or any foreign objects into the feeding chute.** If food becomes stuck, use only the dedicated pusher to dislodge it.
14. **Remove hard pits or seeds before juicing to avoid damaging the auger.**
15. **Do not place hard objects, metal items, wooden utensils, ceramics, or any foreign materials into the mixing area.**
16. **Do not operate the product continuously for more than 20 minutes.** Allow at least **30 minutes of rest between two working cycles** to prevent motor overheating. If unusual noises, odors, excessive heat, or smoke are detected, **immediately turn off the power and contact maintenance.**
17. After each use, **always turn the switch to the off position** and ensure the device has completely stopped operating.
18. Clean parts that come into contact with food promptly after use to prevent residue buildup, corrosion, or odors.
19. **Non-professional personnel are strictly prohibited from disassembling or repairing this device.** All maintenance must be performed by qualified professionals.
20. If there is any discrepancy between the product images and the actual item, the physical product shall prevail.
21. **Keep this manual properly for future reference.**

COMPONENT INTRODUCTION

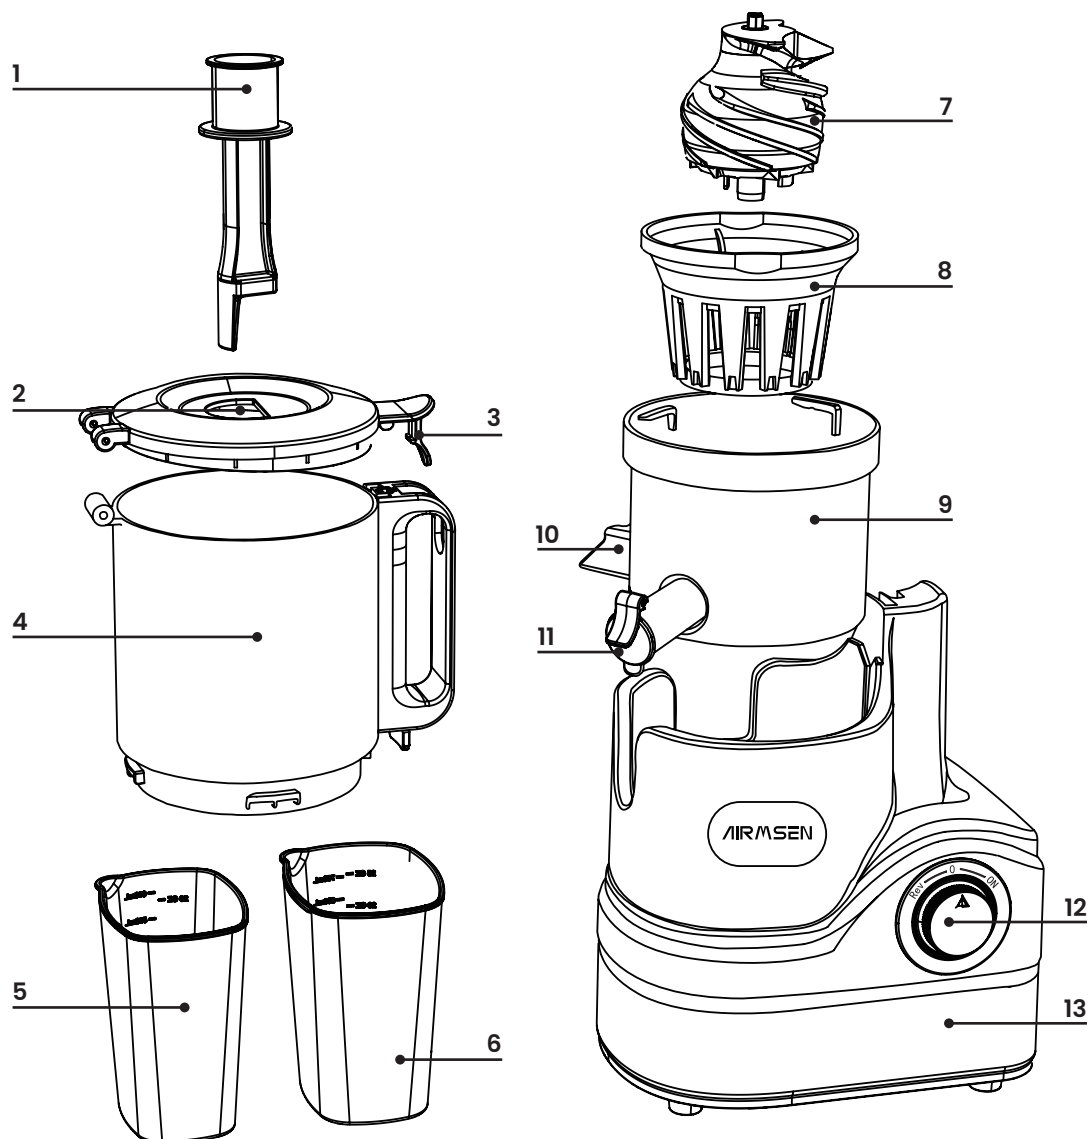

To purchase accessories, please visit: www.airmsen.com


Note: The product images are for reference only. Please refer to the actual product inside the package.

Description:


- | | |
|---------------------------|--|
| 1. Food Pusher | 10. Pulp Outlet |
| 2. Feed Chute | 11. Juice Outlet |
| 3. Safety Switch (On/Off) | 12. Power Switch |
| 4. Hopper | <ul style="list-style-type: none"> • ON: Motor start. • O: Motor stop. • Rev: Rotation change position, it can be used just in case of food clogging and for cleaning after use. |
| 5. Juice Collection Cup | 13. Main Unit |
| 6. Pulp Collection Cup | |
| 7. Auger | |
| 8. Strainer | |
| 9. Juice Bowl | |

INITIAL CLEANING BEFORE FIRST USE

1. Thoroughly clean the **Food Pusher, Hopper, Auger, Strainer, Juice Bowl, Juice Collection Cup, and Pulp Collection Cup** with food-safe detergent, then air-dry. Wipe the exterior of the Main Unit with a damp cloth.
2. After cleaning, install all components back onto the Main Unit.

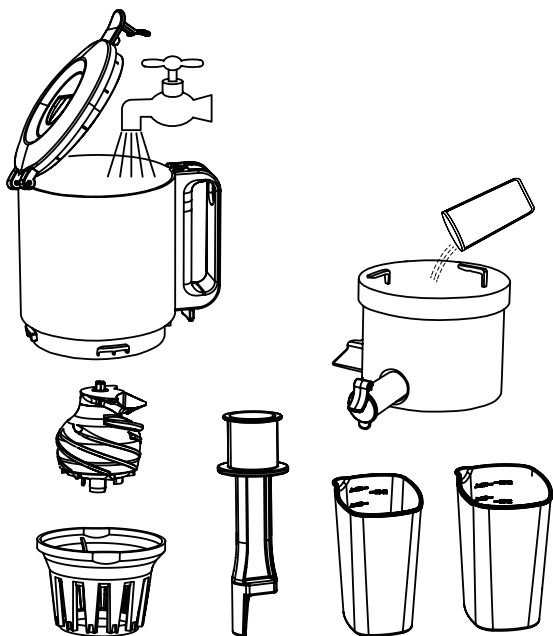

Wash with food-safe detergent

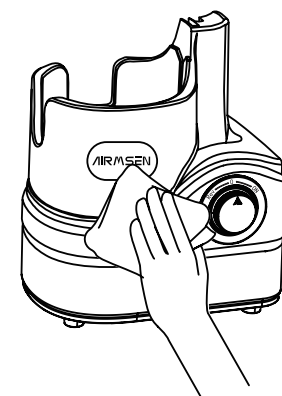

Wipe with a damp cloth

3. **Note:** Avoid allowing water to enter the interior of the device during cleaning to prevent potential hazards.

ASSEMBLY INSTRUCTIONS


Before Operation, Please Check:

1. Clean all components before first use.
2. Ensure the Compressed Silicone Strip is installed correctly.


STEP 1:

Insert the **Compressed Silicone Strip** precisely into the pulp outlet groove at the bottom of the **Juice Bowl**.

Note: Improper installation may cause liquid leakage during juicing.

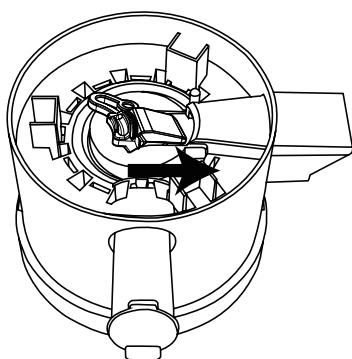


Insert the Silicone Plug into the Pulp Outlet groove.

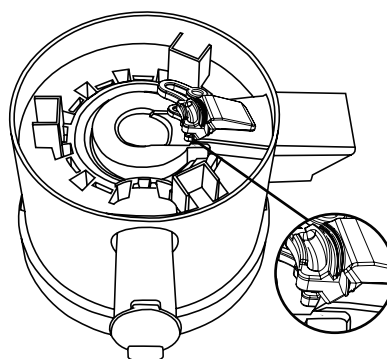

Installation Complete.


STEP 2:

Place the **Juice Bowl** onto the Main Unit in the indicated orientation, ensuring both the **Juice Outlet** and **Pulp Outlet** are aligned with the drive shaft.

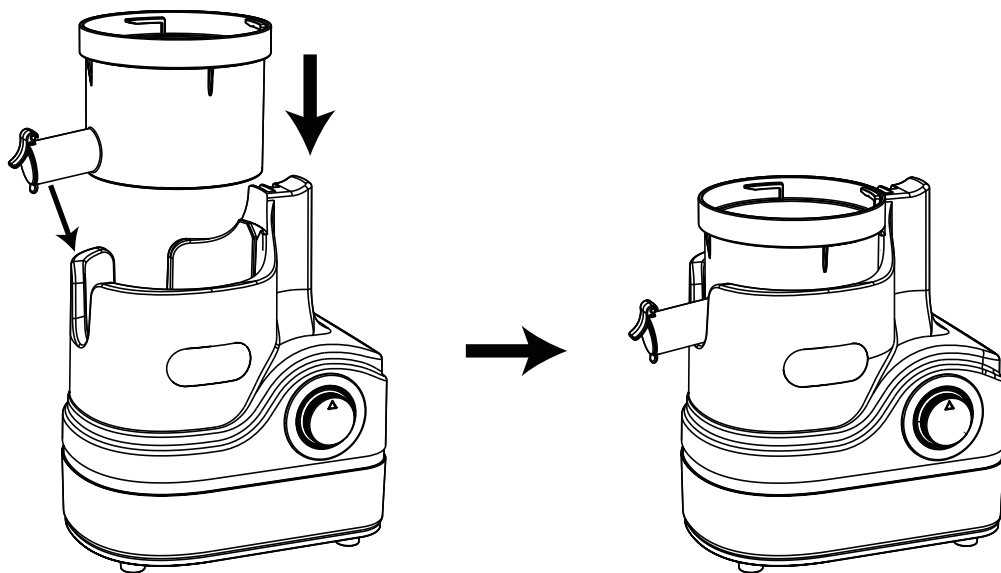


STEP 3:

Place the **Strainer** into the **Juice Bowl** and press down gently until it is fully secured.

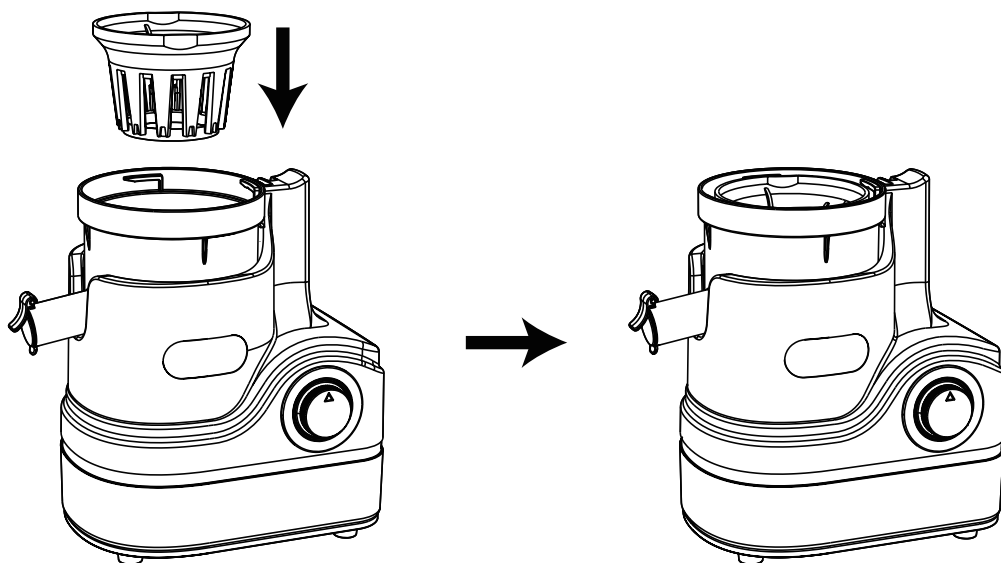


STEP 4:

Insert the **Auger** vertically into the center of the **Juice Bowl**, then press down firmly until it makes full contact with the bottom.

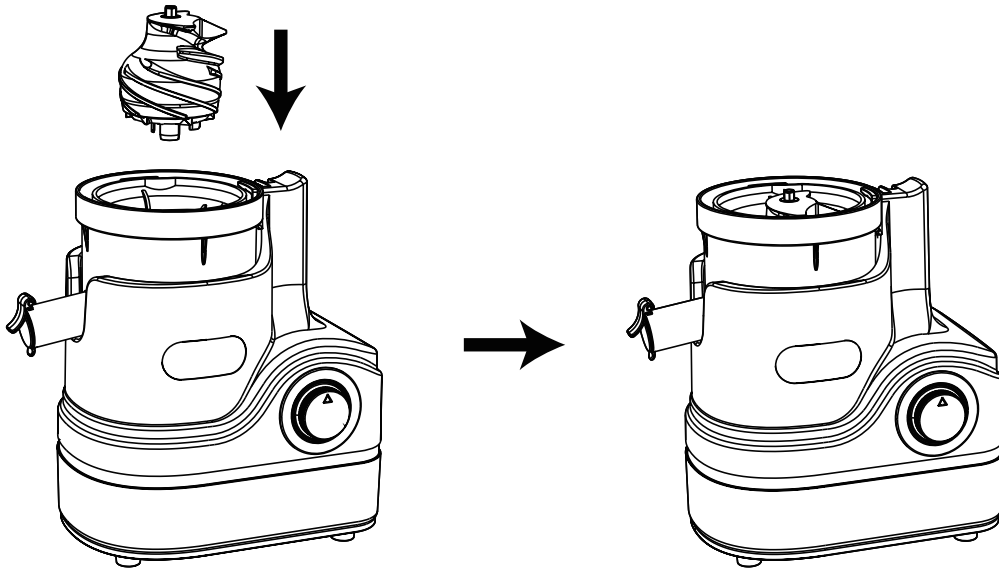**STEP 5:**

Align the dot "●" on the **Hopper** downward with the "Unlock" symbol on the **Juice Bowl**. Rotate the **Hopper** clockwise onto the **Juice Bowl** until the safety lock engages firmly.


Note: Please ensure the Hopper Lid is open during installation.

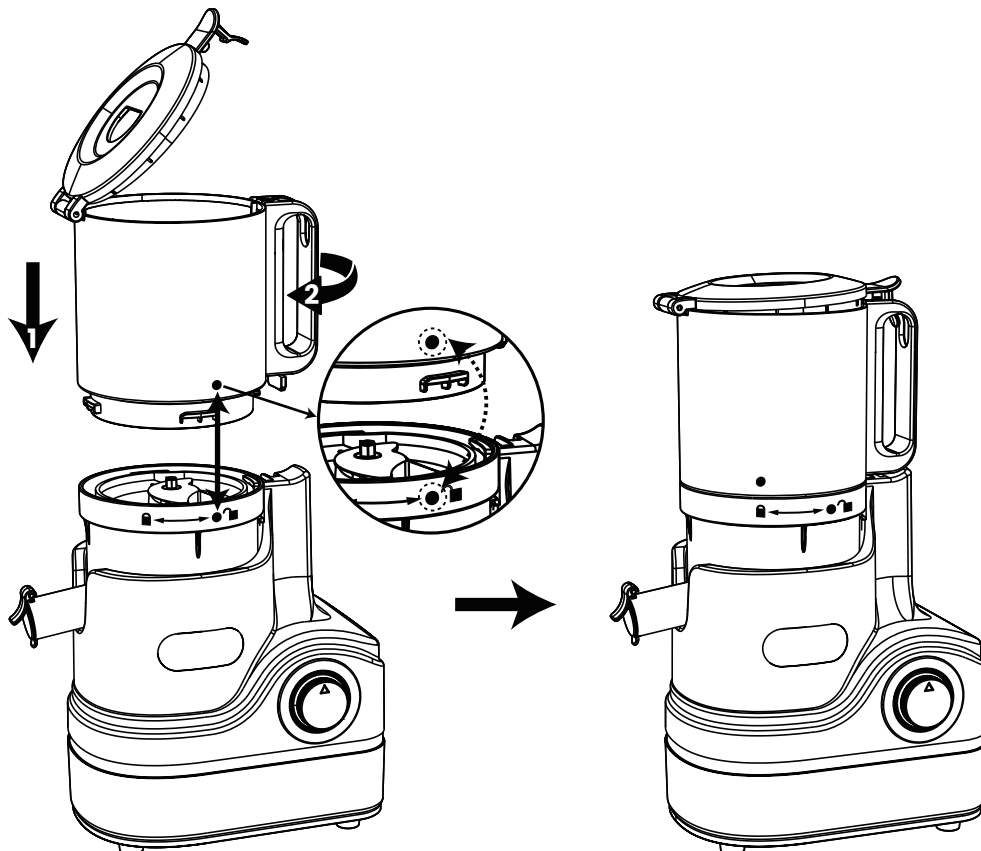

STEP 6:

Press down the **Hopper Lid** until a “click” sound is heard, indicating it is properly installed.

Note: The product will not operate if the Hopper Lid is not properly closed.

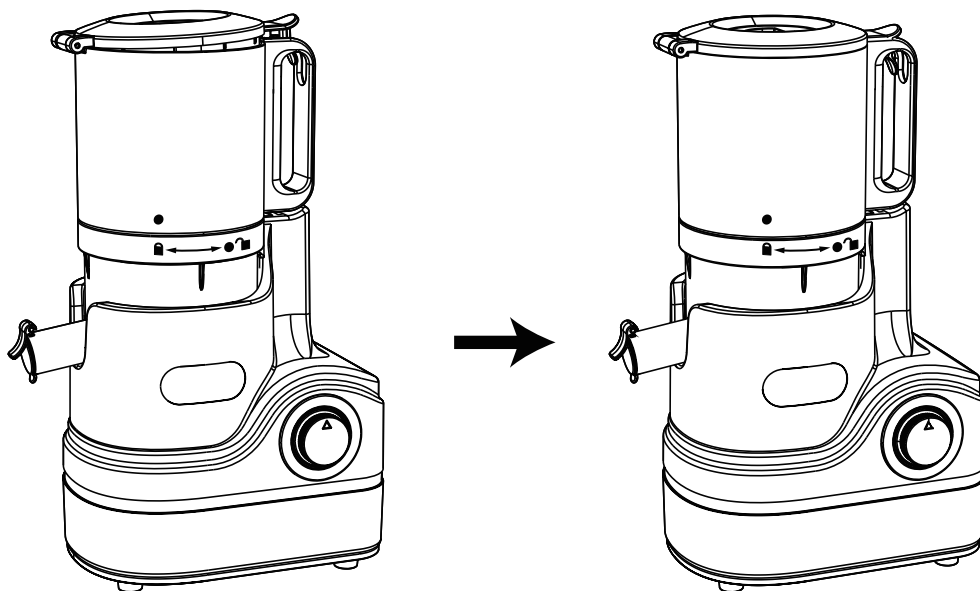

OPERATION INSTRUCTIONS


Pre-Use Checklist:

- Ensure all components are **correctly and securely installed**.
- Confirm the **Power Switch** is in the “O” (Off) position.

Operating Steps:


1. Connect the device to a power source.

Note: Never handle the power plug with wet hands to avoid electric shock, short circuits, or fire.

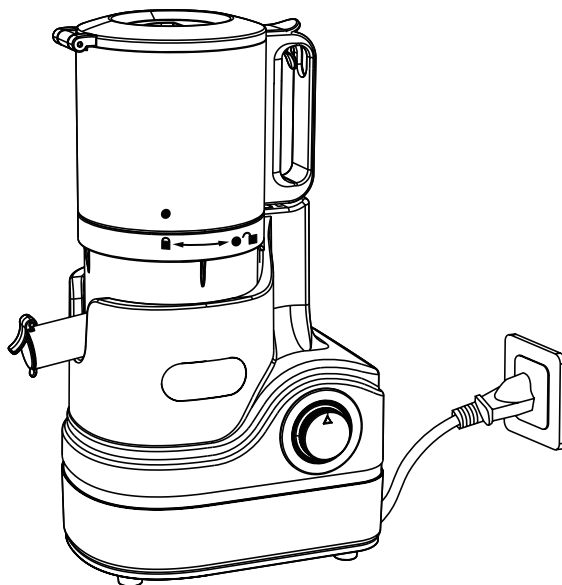


2. Wash fruits or vegetables and cut them into pieces (recommended size: **no larger than 2x1 in. / 5.08x2.54 cm**).

3. Place the **Juice Collection Cup** and **Pulp Collection Cup** against the **Main Unit**, aligning them with the **Juice Outlet** and **Pulp Outlet**, respectively.

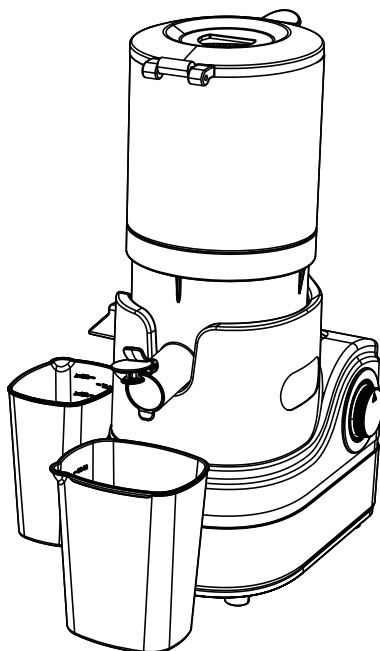

4. Open the **Hopper Lid**, add ingredients, and close the lid firmly.

Note: Always remove pits and seeds before juicing to prevent damage to the Auger.

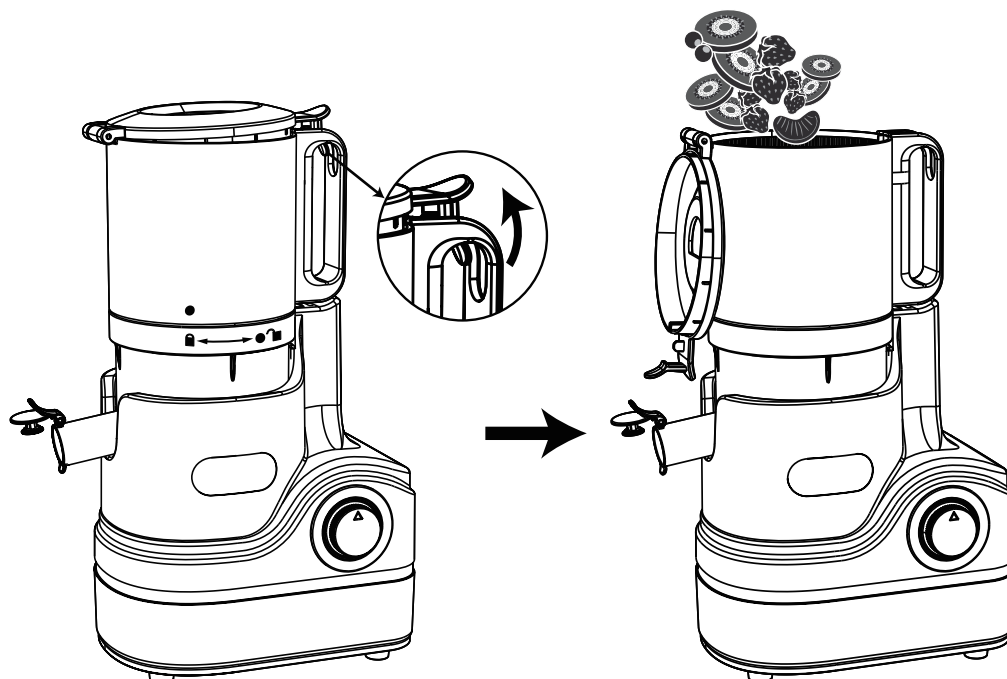

5. Turn the **Power Switch** to the **"ON"** position to start the device. If jamming occurs, switch to **"Rev"** to eject the ingredients, then return to **"ON"** to resume juicing. After completion, turn the switch back to **"O"**.


Note: If ingredients become stuck, operate the switch as follows:

- **"O"**: Off.
- **"ON"**: Forward operation.
- **"Rev"**: Reverse operation .

6. Additional ingredients may be added through the **Feed Chute** during operation using the **Food Pusher**.

Note: Never insert fingers or hands into the **Feed Chute** while the device is running.

Tip: Do not operate the device continuously for more than 20 minutes.

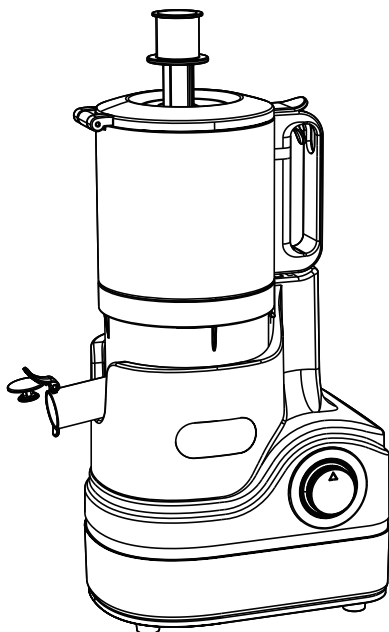


DISASSEMBLE AND CLEAN


1. Turn off the device and **unplug the power cord** from the electrical outlet.

Note:


- To facilitate cleaning, it is recommended to **let the device run for about 30 seconds after juicing is completed**.
 - If the **Hopper** is difficult to open, switch the **Power Switch** to the **“Rev”** position for a few seconds, then turn it off. Repeat this 2-3 times to loosen any jam. Then, hold the **Hopper** with both hands and rotate it **counterclockwise** to open.
2. Open the **Hopper Lid**, hold the main body of the **Hopper**, and rotate it **counterclockwise** to remove it from the **Main Unit**.

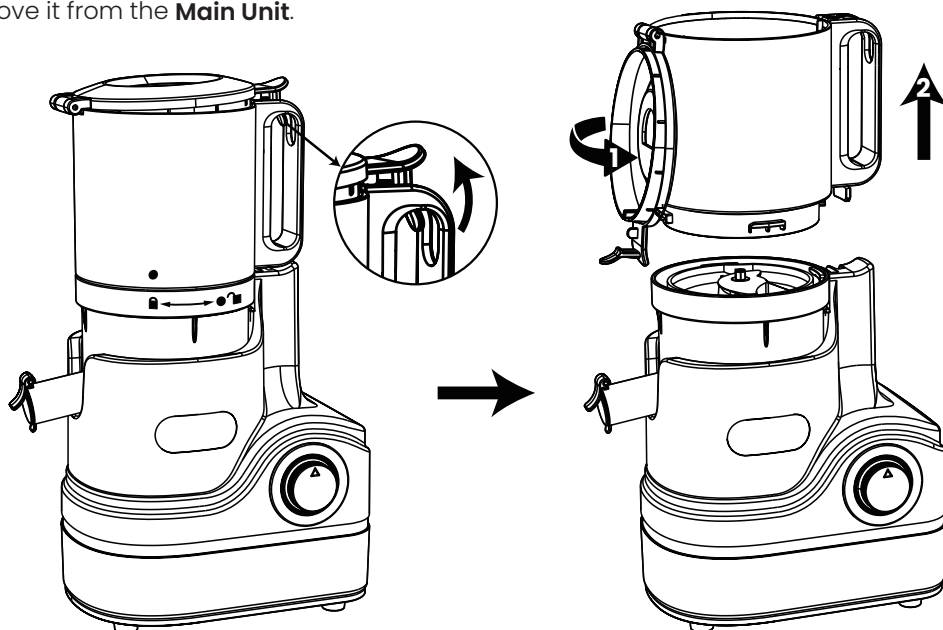


3. Hold the **Juice Bowl Assembly** and lift it **vertically upward** to remove it as a whole.

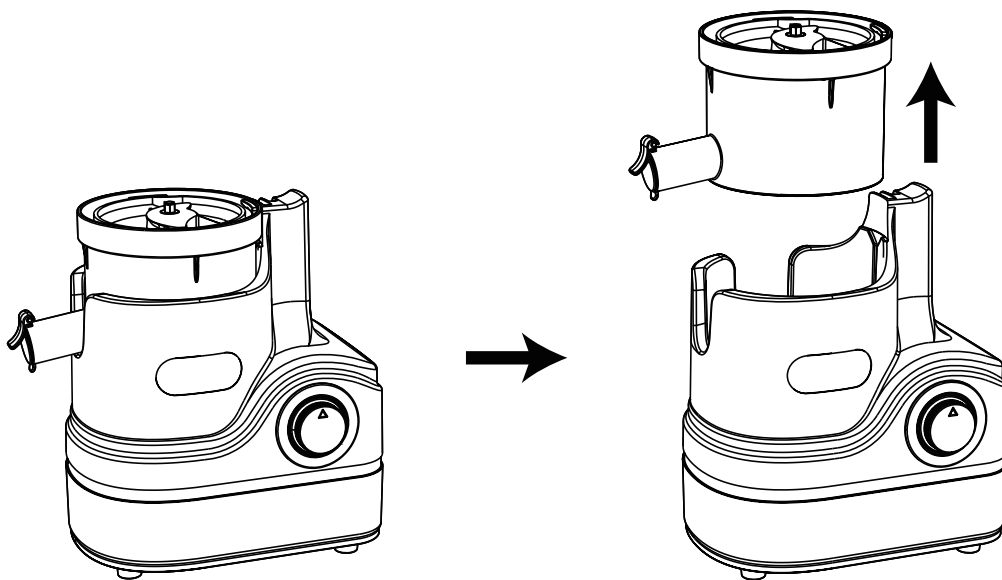


4. Hold the **Auger** and pull it **straight upward** with force to remove it.

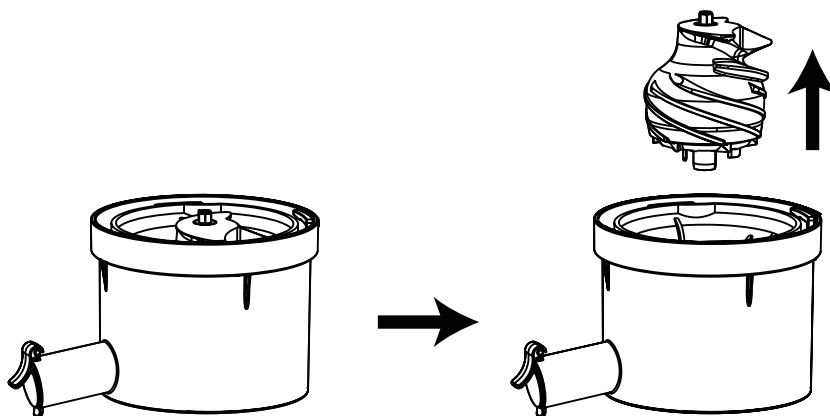

5. Hold the **Strainer** and lift it **vertically upward** to remove it.

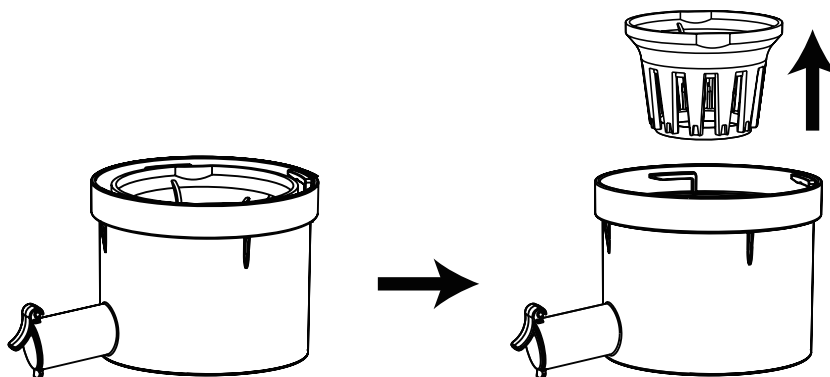

- When cleaning the **Pulp Outlet**, first turn the **Juice Bowl** upside down, and **remove the Silicone Plug** for thorough cleaning. After cleaning, **ensure the Silicone Plug is fully reinstalled** to prevent juice leakage during next use.

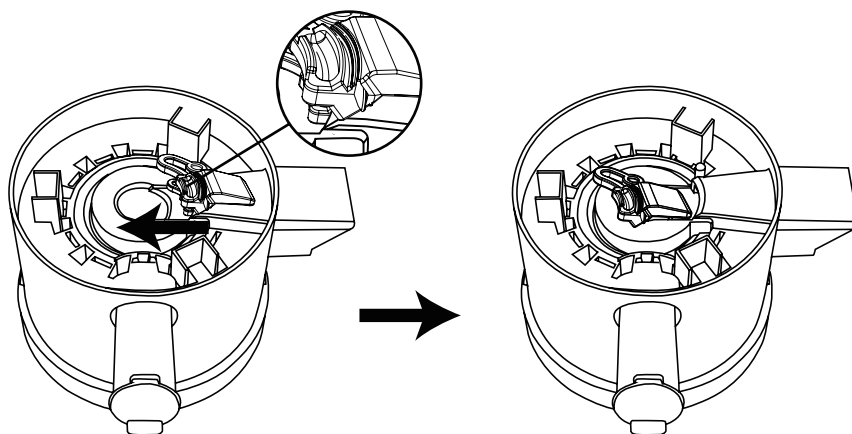

TROUBLESHOOTING Q&A

Issue 1: The juicer suddenly stops operating

Possible Cause:

- Too much ingredients added at one time.
- Hard fruits or vegetables (e.g., carrots) were not adequately cut into small pieces.
- The motor overheating protection has been activated.

Solution:

- Turn the knob from the **"ON"** position to the **"Rev"** position to reverse and remove the ingredients. Reduce the amount of ingredients added at one time.
- Always cut hard fruits and vegetables into strips or small pieces before placing them into the **Feed Chute**.
- Immediately turn off the **Power Switch** and unplug the power cord. Let the unit cool down for about 30 minutes before restarting.

Issue 2: Low juice yield or leakage from the Main Unit

Possible Cause:

- The **Silicone Plug** is not properly installed.

Solution:

- Refer to the user manual to correctly install the **Silicone Plug**, ensuring a complete seal.

Issue 3: Unusual noise during operation

Possible Cause:

- Normal operational sound from the squeezing process.

Solution:

- If the sound is uniform and the device is operating normally, it is a natural phenomenon during juicing and requires no action.

Issue 4: The Hopper or Strainer is difficult to open

Possible Cause:

1. Ingredients are overfilled, causing jamming.

Solution:

1. Turn the knob to the “Rev” position and run for a few seconds to reverse and loosen the ingredients. It can then be opened easily.

Issue 5: Containers or accessories become stained after use

Possible Cause:

1. Natural pigments from fruits and vegetables (e.g., carotene, anthocyanin) may cause staining.

Solution:

1. This is normal and does not affect safety or performance.

WARRANTY

Product Name	Model Number	Default Warranty Period	For your own reference, we strongly recommend that you record your order number and date of purchase.
SLOW JUICER	KS-218T	2 years	

TERMS & POLICY

AIRMOSEN warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

AIRMOSEN will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. AIRMOSEN is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional safety or usage warnings included in the product packaging and manual.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

AIRMOSEN assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

DEFECTIVE PRODUCTS & RETURNS

Should your product prove defective within the specified warranty period, please contact Customer Support via **service@airmsen.com** with your order number.

DO not dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the unit with a copy of your invoice and order number.

CUSTOMER SUPPORT

WE'RE HERE TO HELP!

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

CUSTOMER SUPPORT

Email: **service@airmsen.com**

Telephone: **1-844-725-2333**

*** To best serve you, our AIRMSEN Representatives are available to answer your calls Monday to Friday, 10:30 AM – 6:30 PM EST.**

If you need to purchase product accessories, please visit **www.airmsen.com**.

*** Please have your order confirmation number ready before contacting Customer Support.**



<https://www.facebook.com/Airmsen>



<https://www.youtube.com/@AIRMSEN>

For product operation videos, please subscribe to AIRMSEN's official Youtube account.

AIRMSSEN

QUESTIONS OR COMMENTS?

EMAIL	OR VISIT US ONLINE AT
service@airmsen.com	www.airmsen.com

Printed in China

